

2016 + Tacoma streamline bumper install guild

Tools needed:

wrench and ratchet.


14mm, 12mm, 10mm, 17mm

phillips screw driver and flathead.

cutting tool of your choice.

Lets get started:

Pull the truck into your work area. Pop open the hood, grab the 10mm and flathead. Pop the two clips and remove the two 10mm bolts. Pull grille out!

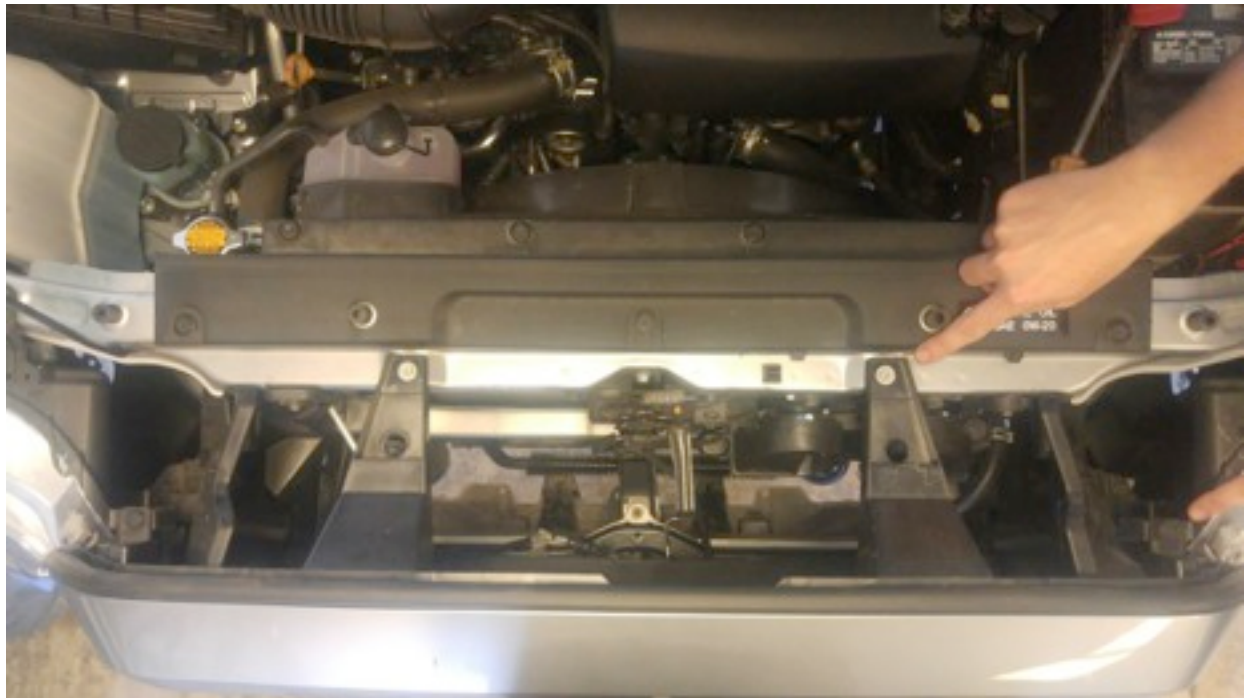

Once the grille is out. Remove the remaining clips and unhook the fog light wires. On the sides of the bumper there are one clip and two bolts that need to be removed that hold the liner in.



Once that is done. Pull the liner back, reach in and push the prongs closed to get the flair clips out. like the picture below.



After that grab the bumper from behind the flair and in front of the headlight and give it a tug. Have someone hold the other side or let it fall if you have no help.

(make sure fog wires are off and fog light unplugged)



Set the bumper on the ground and remove the clips holding in the jay leno chin. HAHA



After it is removed. Make a mark in the corner like picture below and make your cut. Many items can do this. I believe a oscillating saw is the cleanest cut. After cut clean up the plastic for trim to be added later

PS: Thanks Eddy.
livepage.apple.com



MAKE THE CUT





Black door trim will make it look really clean and will hide if its not a straight cut.



PS: Thanks Eddy.
livepage.apple.com

Go ahead and remove the crash bar with the 14mm



While down there. Take the supplied coolant extention bracket and install it. Remove the driver side two 12mm bolts out. The far right side bracket lift it up and slide the ext bracket under it. Hand tight bolt back down. Making sure the new ext bracket has the nut side down. Push the coolant line back and add the new bolt to the ext bracket. SEE IMAGE below.



PS. Thanks Eddy.
livepage.apple.com



Also you will want to remove the tow hook to avoid it being in the way with a 17mm



PS: Thanks Eddy.
livepage.apple.com

Next you will want to reinstall the plastic bumper making sure the clips on the furthest part of the bumper snap back in.



PS: Thanks Eddy.
livepage.apple.com

livepage.apple.com ***Set the bumper on the studs tighten down the six nuts with the 14mm double check all the clips and all the screws from putting the bumper back together.***